




首先把压缩文件 Simatic.HMI 复制到空白 U 盘，然后点右键解压到当前文件夹，注意一定要选择**解压到当前文件夹**，确保 U 盘里面名为 Simatic.HMI 的文件夹只有一个。然后把 U 盘插到电脑屏上，重启电脑屏，出现以下画面：

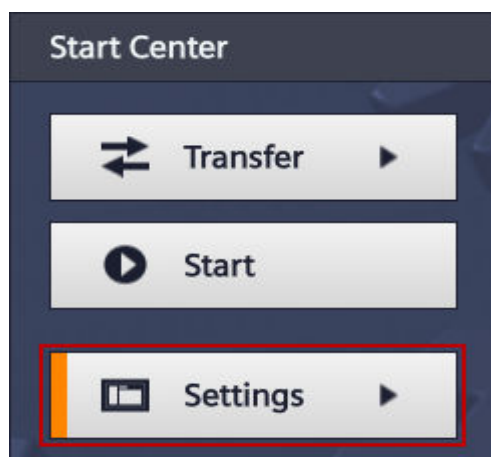

点击“Settings”打开操作面板的控制面板。

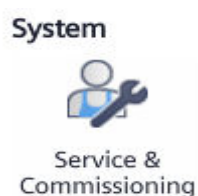

双击 "Service & Commissioning".

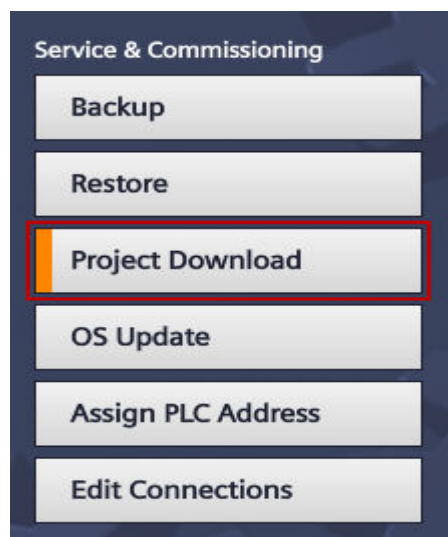

点击 "Project Download"。

Project Download

Select USB storage medium

Start search

USB storage media

USB_X60.1
Size: 7.4707 GB / Free: 5.42557 GB

Step 1/4

>

选择 U 盘并点击箭头。

Project Download

Download project from

Start search

Projects

USBTransfer.HMI_2[KTP700 Basic PN]
RT version: 14.0.0.0 / Created: 2016-09-13 12:14:23 (UTC) / Orientation:
landscape / Needed licenses: WinCC Sm@rtServer for SIMATIC Basic Panel

<

Step 2/4

>

选择项目并点击箭头。

Project Download

Check before loading

Overwrite on device

User administration: ☐ OFF

Recipe data: ☐ OFF

Different version on device

Upgrade or downgrade Firmware: ☐ OFF

< Step 3/4 >

确认是否需要覆盖用户管理和配方数据并确认操作面板镜像已被传送后，点击箭头。

Project Download

Confirm your settings

USB medium: USB_X60.1

Path: Simatic.HMI/RT_Projects

Project: USBTransfer.HMI_2[KTP700 Basic PN]

Created: 2016-09-13 12:14:23 (UTC)

Orientation: landscape

Licenses: missing WinCC Sm@rtServer for SIMATIC Basic Panel

User administration data will remain unchanged

Firmware will remain unchanged

< Step 4/4 Accept

检查设置并点击“Accept”开始下载。下载完成后拔掉 U 盘即可。